

Assembly Instruction
Of
NMA-LMR400

Step1

In turn on the cortical external set of a screw, thin gasket, sealing ring

Use the blade remove the husk of the 10 mm, as shown in figure

In the right direction, installed

Shall not damage parts



Step2

Thick gasket set outside the shielding layer

In the right direction, installed

Shall not damage parts



Step3

The shielding layer to peel, fully developed

In the right direction, installed

Shall not damage parts



Step4

bush set outside the shield, as shown in figure

In the right direction, installed

Shall not damage parts



Step5

Bush pressed into, as shown in figure

extra shielding layer cut off to prevent the shell can't complete set in, as shown in figure

In the right direction, installed

Shall not damage parts



Step6

Use the blade to remove insulation, and keep a distance, the distance from 1 mm - 1 .5mm

In the right direction, installed

Shall not damage parts



Step7

Remove the shield as shown in figure

In the right direction, installed

Shall not damage parts



Step8

Set in the shell. At the time of loading will be seal hard into the shell, so be patient in the shell.

As shown in figure.

In the right direction, installed

Shall not damage parts



Step9

The fixed shell, using a wrench to tighten a screw. As shown in figure.

In the right direction, installed

Shall not damage parts



Step10

Finished product, the other end as the same way. As shown in figure.

