
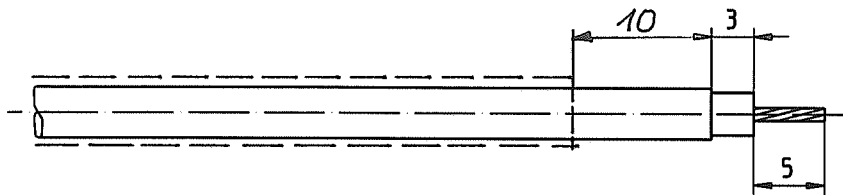


gescannt


# Assembly instruction: 53 T2 Series: N

Straight connector  
for semi-rigid cable


Cable entry:  
Center contact - soldered  
Copper jacket - soldered

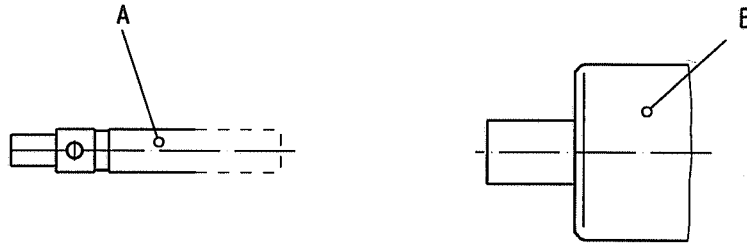

- 1) Prepare the cable according to the diagram.  
In case of a FEP-jacket remove it to the shown dimension.

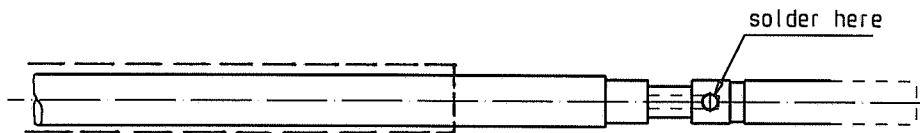

- 2) Slide center pin 'A' over the inner conductor of the cable and solder it.

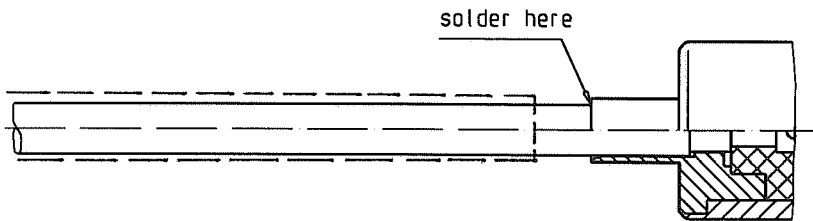

- 3) Insert the prepared cable into the connector body 'B' until the center pin engages perceptibly.
- 4) Check the interface dimension. See the customer drawing of the relevant connector.
- 5) Solder the copper jacket to the connector body.

<p style="text-align: center;"><b>Rosenberger</b> Hochfrequenztechnik 84526 Tittmoning</p>						
<p style="text-align: center;"><b>CAD</b></p>						
b	07-0873	29.1.08	Jan	Bearb.	28.05.96	Krautenb. Sa. M 2:1
a	CAD-MTP	28.05.96	Kra. Sa.	Gepr.	.	Blatt 1/1
Zusl.	Aenderung	Datum	Name			

Tools:	
Stripping tool	.....
Soldering equipment	.....
	.....
	.....
	.....

ruer diese technische Unterlage behalten wir uns alle Rechte vor. (DIN 34)