

Installation Instruction of 7/16 type Connector (PLU010524 1/2" Cable)


Edition No. H/1

Please read the instruction carefully before installation. Any improper operation can result in badness influence and sequel.

Installation tools and material: Millimeter Scale Ruler, Electric Knife, Monkey Wrench, Flat File, Hair Brush and so on.


1) Structure of Connector: (Fig 1)

Parts of Connector: 1. Main shell body; 2. Cable Clip.

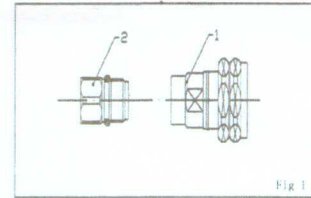


2) Decorticate:

Size of cable to be decorticated should be strictly according to it indicated in Fig2, the end surface of inner conductor should be chamfered by small file of $1 \times 45^\circ$. Smooth the processing surface and clean copper scraps on the kerf and bur on the inner conductor.

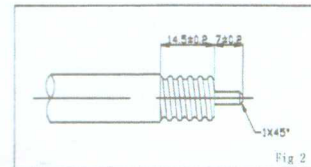

3) Install Cable Clip:

Set cable clip on cable, outer conductor should be longer than the plane of the clip 2.5mm, position as indicated in Fig 3.

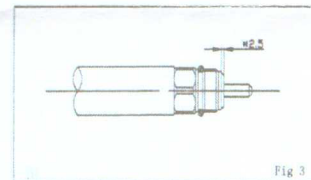

4) Install Main Shell Body: (Fig 4)

Keeping cable clip stopped, tighten main shell body to cable clip. See fig 4. Assembling is finished.

