
### Installation Instruction of N type Connector

PLU010526

1/2" Cable)


Edition No. B/0

Please read the instruction carefully before installation. Any improper operation can result in badness influence and sequel.

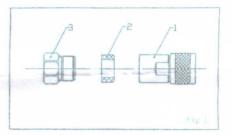


Installation tools and material: Millimeter Scale Ruler .

Electric Knife . Monkey Wrench . Flat File . Hair Brush and so on.



## 1) Structure of Connector: (Fig 1)


Parts of Connector: 1. Main shell body; 2. Whorl loop;3.Cable Clip.

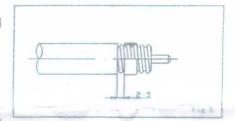

#### 2) Decorticate:


Size of cable to be decorticated should be strictly according to it indicated in Fig2,

the end surface of inner conductor should be chamfered by small file of 1×45°. Smooth the processing surface and clean copper scraps on the kerf and bur on the inner conductor.

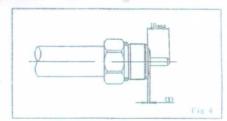

# 3) Install Cable Clip:

Set whorl loop on cable, position as indicated in Fig 3 Set cable clip on cable, position as indicated in Fig 4.

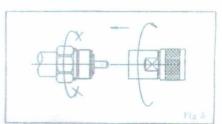

#### 4) Install Main Shell Body: (Fig 5)

Keeping cable clip stopped, turn main shell body to tighten main shell body and cable clip.

Assembling is finished.

