

Installation Instruction of N type Connector


(PLU010530 1/2" Cable)

Please read the instruction carefully before installation. Any improper operation can result in badness influence and sequel.

Installation tools and material: Millimeter Scale Ruler, Electric Knife, Monkey Wrench, Flat File, Hair Brush and so on.


1. Structure of Connector: (Fig 1)

Parts of Connector: 1. Main shell body; 2. Whorl loop; 3. Cable Clip.

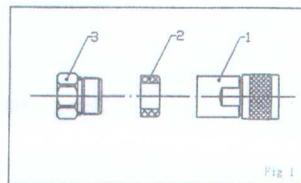


2. Decorticate:

Size of cable to be decorticated should be strictly according to it indicated in Fig2, the end surface of inner conductor should be chamfered by small file of $1 \times 45^\circ$, Smooth the processing surface and clean copper scraps on the kerf and bur on the inner conductor.

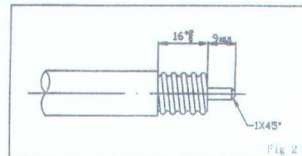

3. Install Cable Clip:

Set whorl loop on cable, position as indicated in Fig 3. Set cable clip on cable, position as indicated in Fig 4.

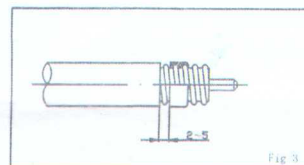

4. Install Main Shell Body: (Fig 5/6)

Keeping cable clip stopped, turn main shell body to tighten main shell body and cable clip.

Assembling is finished.

